

TROUBLESHOOTING

CONDITION	ACTION
Bulb does not work, flickers or is dim:	Check that the bulb is correctly seated in the socket.
	Check that the socket is clean.
	Check that the wires have not come loose.
	Check that the bulb is intact (no damage, no loose bulb ends, no broken filament).
	If problems persist, there could be a fault with the vehicle's wiring or electrical system. Contact your Toyota Dealer Service Department for diagnosis and repair.

REFERENCES

Please refer to the following sources for additional information:

- Your vehicle's Owner's Manual
- Your vehicle's Repair Manual

CAUTION

Moving parts like the fan blade and drive belts, as well as extreme heat in the engine compartment or from the exhaust system can result in serious injury.

- Approach with caution and care.
- Never take shortcuts when replacing parts.
- Improper servicing may damage your Toyota and lead to personal injury.
- Unless you have proper knowledge, equipment and tools, you should have your Toyota Dealer Service Department perform the repairs and maintenance.

IMPORTANT SAFETY NOTICE

Proper installation of Genuine Toyota replacement parts is essential for the safe and reliable operation of your vehicle.

Following these instructions will:

- Help to assure your personal safety
- Assist you in the proper replacement of specific parts

There are many variations in the step-by-step procedures used in installing various parts, and varying skill levels of individuals doing the parts replacement. These instructions cannot anticipate all circumstances or provide advice and caution on each. If you are in doubt concerning your ability to replace the part or have any questions, consult your local Toyota Dealer Service Department and have the work performed by an experienced technician.

For further assistance, contact your Toyota dealer.



Visit our Web site at www.toyota.com
M/N 00405-HOWTO-DMLMP

How To Replace The DOME LAMP



A GUIDE TO ASSIST YOU
IN THE PROPER REPLACEMENT
OF GENUINE TOYOTA PARTS



DIFFICULTY LEVEL
FROM ONE TO FOUR—FOUR BEING THE MOST DIFFICULT

ESTIMATED TIME INVOLVED



5-10
MINUTES

TOOLS AND SUPPLIES

- Genuine Toyota Replacement Bulb
- Flat-tip (– shaped) screwdriver (small #1)
- Rag or paper towels

CAUTION: Make sure the driver's and passenger's doors are closed and that the dome lamp switch is in the "off" position before changing the bulb.

INSTRUCTIONS

- 1 ALWAYS REMOVE THE KEYS FROM THE IGNITION WHEN WORKING ON THE VEHICLE. SEE **CAUTION** ON BACK PANEL.

DOUBLE-ENDED BULBS – These are primarily used for interior dome lights.



- 2 REMOVE THE BULB LENS COVER – Using the screwdriver, carefully release the lens cover from its housing.



INSTRUCTIONS (continued)

- 3 REMOVE THE BURNED-OUT BULB – Carefully pull back one of the spring clips to release tension on the bulb. If the bulb is stuck, use the screwdriver to release the bulb from the spring clips.



- 4 INSPECT THE SOCKET FOR DIRT AND CORROSION – Clean off any dirt with a rag or paper towel. If corroded, the light socket(s), wire connector, and/or light assembly may require replacement.


Consult your Toyota Dealer Service and/or Parts Departments for details and parts.

- 5 INSPECT THE LENS COVER – Check for cracks, damage and deterioration. Replace as required.

- 6 CHECK FOR LOOSE WIRES OR CONNECTORS – Repair or replace as required.

INSTRUCTIONS (continued)

- 7 INSTALL A NEW BULB – Carefully pull back one of the spring clips to seat the bulb between the clips, then release tension on the clip and make sure the bulb is properly seated.

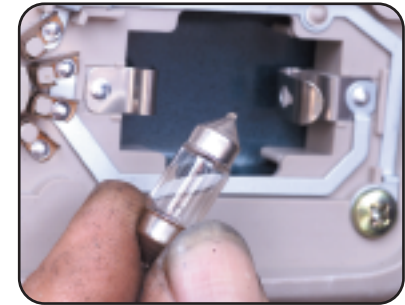

- 8 INSTALL THE BULB COVER.

- 9 CHECK THAT THE LIGHT WORKS.